

FHC-NS2304

Caution and Warning:

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. This marking indicates this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used, device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
3. Children shall not play with the appliance.
4. The appliance is used to heat the nasal depilatory wax.
5. To avoid burns, electrocution, fire or injury, never use the appliance if:
 - 1) It has a damaged cord or plug.
 - 2) If the appliance has been damaged.
 - 3) If the appliance doesn't work properly.
6. Keep the cord away from heated surface.
7. Always use the appliance on a flat surface.

8. DO NOT place the appliance into water or any liquid, keep surrounding area dry.
9. DO NOT place or store the appliance where it can fall or be pulled into a tub or sinkhole.
10. DO NOT reach into the water if the appliance falls into water, unplug it immediately.
11. DO NOT wrap the cord around the appliance during working.
12. Unplug the appliance after using. Cool it before handling, cleaning or storing the appliance.
13. Keep out of reach of children. The machine will remain hot for a long period of time after use.



NASAL & EAR
HAIR REMOVAL
WAX HEATER KIT
(ELECTRONIC TYPE)

FHC-NS2304

This user manual includes Product Specifications, Product Contents, Instructions for Use, Cautions and warnings.

Product Specifications

Nasal & Ear Hair Removal
Wax Heater Kit (Electronic type)

Product Code: FHC-NS2304

Power: 6W Voltage: DC 5V/1A

Constant temperature: 53°C

Certification: CE(EMC), FCC

Anti-electric shock level: III


Product Size: 63*53*28mm

Wax melting time: 5-7 minutes



This waxing kit includes

- *1pc of double pot wax heater
- *6pcs of nasal wax applicators
- *1pc of USB power cable
- *1 user manual

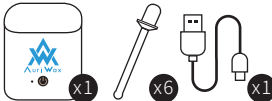

Instructions for Use

1. Unwrap the wax applicator, place wax into the heater.
2. Plug the power cable, the blue light is flashing when connected with power
3. Press the power button to turn it on. The light turns RED when it starts working.
4. Constant temperature heating: When wax is ready to use, the light turns purple and keeps flashing. It will maintain this temperature until it is powered off. Wax melting time: DC 5V/1A takes 5-7 minutes (The current below 1A is not supported)
5. Take the wax applicator out of the heater, immediately insert the applicator into the nose or ear. Do not move or twist the applicator once it has been inserted.
6. Wait for 1-2 minutes until the wax is completely hardened.
7. Hold the applicator tightly and pull in one swift movement. (The quicker you pull the applicator, the more effective the hair removal result.)
8. Repeat the process with the other nostril or ear.
9. Press the power icon to power off the heater when you don't use it.

